

UtiliGuard® Model Comparisons



	ADV/+	Standard	Basic
Number of Frequencies	Up to 100	Up to 100	5/4
Ability to Add/Configure Frequencies Uses configuration software to add/subtract frequencies.	✓	✓	—
Direction Enabled Gives the direction of the current to help identify target line.	✓	✓	—
Wireless Connection For GPS devices, not RX/TX communications.	✓	—	—
Ambient Interference Measurement (AIM®) Measures noise and suggests the best frequencies to use.	✓	—	—
Receiver/Transmitter Communication Remotely control the transmitter with the receiver.	✓	—	—
Offset Depth Displays depth and offset distance when target line is obscured.	✓	—	—
Dual Output With Optional Dual Leads Connects to two target lines at one time – switch from one lead to the other via the receiver.	✓	—	—
Battery Life Receiver 30 hours, transmitter 100 hours.	✓	✓	✓
User Can Install Software Updates	✓	✓	✓